

Firebox® T45

HW Model: BS4AE5

Quick Start Guide

Guía Rápida

Guide de démarrage rapide

クイックスタート・ガイド



watchguard.com/start

Activate Your Firebox

1. Go to www.watchguard.com/activate
2. Log in to your WatchGuard account, or create a new account.
If you create a new account, return to www.watchguard.com/activate after you finish the account creation process.

Connect Your Firebox and Power It On

Make sure your computer is configured to use DHCP. When you connect to the Firebox, it will assign an IP address on the **10.0.1.0/24** network.



Connect to the Web UI

1. Go to <https://10.0.1.1:8080>
You can safely ignore certificate warnings, because the Firebox uses a self-signed certificate.
2. Log in with the user name **admin** and the passphrase **readwrite**.
3. Follow the directions in the Web Setup Wizard to configure your Firebox.
4. Install the Firebox in your network.

For more information, go to watchguard.com/start

Activation de votre appliance Firebox

FRANÇAIS

1. Rendez-vous à l'adresse www.watchguard.com/activate
2. Connectez-vous à votre compte WatchGuard ou créez un nouveau compte.
Si vous créez un nouveau compte, retournez à l'adresse www.watchguard.com/activate à la fin du processus de création du compte.

Branchement et mise sous tension de votre appliance Firebox

Assurez-vous que votre ordinateur est configuré pour utiliser le protocole DHCP. Lorsque vous connectez votre appliance Firebox, elle attribue une adresse IP sur le réseau **10.0.1.0/24**.



Connexion à l'interface utilisateur Web

1. Rendez-vous à l'adresse <https://10.0.1.1:8080>
Votre appliance Firebox utilisant un certificat auto-signé, vous pouvez, sans risque, ignorer les avertissements liés aux certificats.
2. Connectez-vous avec le nom d'utilisateur **admin** et le mot de passe **readwrite**.
3. Suivez les instructions de l'Assistant de configuration Web pour configurer votre appliance Firebox.
4. Installez l'appliance Firebox sur votre réseau.

Pour plus d'informations, rendez-vous sur watchguard.com/start

Active su Firebox

ESPAÑOL

1. Visite www.watchguard.com/activate
2. Inicie sesión con su cuenta de WatchGuard o cree una cuenta nueva.
Si usted crea una cuenta nueva, regrese a www.watchguard.com/activate luego de finalizar el proceso.

Conecte su Firebox y Enciéndalo

Asegúrese de que su equipo esté configurado para usar DHCP. Cuando se conecte a su Firebox, este le asignará una dirección IP en la red **10.0.1.0/24**.



Conéctese a la Interfaz de Usuario Web

1. Visite <https://10.0.1.1:8080>
De manera segura, puede ignorar cualquier certificado de advertencia debido a que el Firebox usa un certificado con firma automática.
2. Inicie sesión con el nombre de usuario **admin** y la frase de contraseña **readwrite**.
3. Siga las directivas en el asistente de instalación web para configurar su Firebox.
4. Instale el Firebox en su red.

Para más información, vaya a watchguard.com/start

Firebox を起動する

1. www.watchguard.com/activate にアクセスします。
2. 登録済みの WatchGuard アカウントにログインするか、新しいアカウントを作成します。
新しいアカウントを作成する場合は、アカウント作成プロセスが完了してからもう一度 www.watchguard.com/activate にアクセスしてください。

Firebox を接続して電源を入れる

コンピュータが DHCP を使用するように設定されていることを確認します。Firebox への接続時に、**10.0.1.0/24** ネットワーク上の IP アドレスが割り当てられます。



Web UI に接続する

1. <https://10.0.1.1:8080> にアクセスします。
Firebox は自己署名証明書を使用するため、証明書に関する警告は無視してかまいません。
2. ユーザー名 **admin** とパスワード **readwrite** でログインします。
3. ウェブセットアップ・ウィザードの手順に従って、Firebox を設定します。
4. ウィザードが完了したら、ユーザー・アカウント **admin** と、ウィザードで設定した管理用パスワードで Web UI にログインします。

詳細については、[watchguard.com/start](https://www.watchguard.com/start)

DECLARATION OF CONFORMITY

WatchGuard Technologies, Inc.
505 Fifth Ave. S., Suite 500
Seattle, WA 98104-3892 USA

WatchGuard Technologies Inc. hereby declares that the product(s) listed below conform to the European Union directives and standards identified in this declaration.

Product(s):

WatchGuard Product Name : Firebox T45
Hardware Model : BS4AE5

EU Directive(s):

Low Voltage (2014/35/EU)
Electromagnetic Compatibility (2014/30/EU)
RoHS EU 2015/863(RoHS2)
WEEE Directive 2012/19/EU
REACH EC 1907/2006,
SVHC 201

Standard(s):

Safety: EN 62368-1 : 2014 + A11:2017
Emission: EN 55032:2015/A1:2020 Class A
FCC Part 15B
ICES-003: Issue 7
CISPR 32 Ed 2.1: 2015+AMD1:2019
VCCI-CISPR 32:2016-11
AS/NZS CISPR 32:2015 AMD1 :2020
EN IEC61000-3-2:2019/A1:2021
EN 61000-3-3:2013/A1:2019
Immunity: EN 55035:2017/A11:2020
IEC 61000-4-2:2008
IEC 61000-4-3:2020
IEC 61000-4-4:2012
IEC 61000-4-5: 2014+AMD1:2017
IEC 61000-4-6:2013
IEC 61000-4-8:2009
IEC 61000-4-11:2020



Signature: *Laurence Huang*
Full Name: Laurence Huang
Position: Hardware Program Manager
Date: 17 May 2022

CE Notice:

The CE symbol on your WatchGuard Technologies equipment indicates that it is in compliance with the Electromagnetic Compatibility (EMC) directive and the Low Voltage Directive (LVD) of the European Union (EU).



RoHS Statement

The member states of the European Union approved directive 2002/95/EC, Restrictions of Hazardous Substances ("RoHS directive") that became valid on July 1, 2006. It states that all new electrical and electronic equipment put on the market within the member states must not contain certain hazardous materials. This device complies with the European Union's RoHS directive 2002/95/EC and similar regulations that may be adopted by other countries for European Sales.

To see additional certification information and languages, go to [watchguard.com/start](https://www.watchguard.com/start)

WATCHGUARD TECHNICAL SUPPORT

1.877.232.3531 +1.206.613.0456
(U.S. and Canada) (all other countries)
www.watchguard.com/support



ADDRESS: 505 Fifth Avenue South, Suite 500, Seattle, WA 98104
U.S. SALES: 1.800.734.9905 • INTERNATIONAL SALES: +1.206.613.0895
WEB: www.watchguard.com