

# WatchGuard Firebox M290/390/590/690 Hardware Guide

---

WatchGuard® Firebox security appliances deliver unparalleled unified threat management, superior performance, ease of use, and value for your small organization or branch office. Our security subscriptions give you fully integrated protection from spyware, spam, viruses, worms, trojans, web-based exploits, and blended threats. From firewall and VPN protection to secure remote access, WatchGuard Firebox appliances support a broad range of network environments.

This guide introduces the WatchGuard M290/390/590/690 RoHS-compliant (lead-free) hardware products.

## Fireware OS

Firebox M290/390/590/690 devices use WatchGuard's next generation UTM OS — Fireware OS. The Firebox includes Fireware OS and delivers exceptional protection against today's sophisticated threats to make sure that your business stays connected. For more information on the features of Fireware, see [Fireware Help](#).

## Package Contents

- Firebox M290/390/590/690
- Quick Start Guide
- 1 straight-through Ethernet cable (green)
- 1 power cord for the M290/390 and 2 power cords for the M590/690 based on the SKU/region of the product
- 2 rack mount ear brackets, with 4 screws each
- 4 rubber feet

## About Your Hardware

### Hardware Specifications

	M290	M390	M590	M690
Processor	NXP LX1046A	NXP LX2084A	NXP LX2120A	NXP LX2160A
Storage	128 GB m.2	128 GB m.2	128 GB m.2	512 GB m.2
RAM	4 GB with ECC	8 GB with ECC	8 GB with ECC	16 GB with ECC

	M290	M390	M590	M690
Power Supply	Single 65W 90-264VAC, 47-63Hz	Single 150W 90-264VAC, 47-63Hz	Dual 150W 90-264VAC, 47-63Hz	Dual 150W 90-264VAC, 47-63Hz
Dimensions	D = 30.7cm (12.09") W = 43.8cm (17.24") H = 4.4cm (1.73")	D = 30.7cm (12.09") W = 43.8cm (17.24") H = 4.4cm (1.73")	D = 30.7cm (12.09") W = 43.8cm (17.24") H = 4.4cm (1.73")	D = 30.7cm (12.09") W = 43.8cm (17.24") H = 4.4cm (1.73")
Weight	3.65kg (8.0469 lbs)	3.65kg (8.0469 lbs)	4.5kg (9.92 lbs)	4.6 kg (10.14 lbs)

## Interface Specifications

This specification describes the interfaces on the Firebox M290/390/590/690 models as shipped.

	M290	M390	M590	M690
Network interfaces	8 x 1000 Base-TX (10/100/1000Mbps) RJ45 connector	8 x 1000 Base-TX (10/100/1000Mbps) RJ45 connector	8 x 1000 Base-TX (10/100/1000Mbps) RJ45 connector  2 x 10G SFP+ interfaces	8 x 1000 Base-TX (10/100/1000Mbps) RJ45 connector  2 x 10G SFP+ interfaces  2 x 10GbE (1000/2500/10000 Mbps) RJ45 Connector
I/O Interfaces	2 x USB 3.0 1 x RJ45 RS232 console port	2 x USB 3.0 1 x RJ45 RS232 console port	2 x USB 3.0 1 x RJ45 RS232 console port	2 x USB 3.0 1 x RJ45 RS232 console port

This specification describes the interfaces on the Firebox M290/M390/M590/M690 devices as shipped. These Fireboxes also have a slot where you can install an additional interface module. The supported interface modules are described in the [Hardware Description](#) section.

## Environmental Requirements

To safely install your Firebox, we recommend that you:

- Install it in a network rack
- Put it in a secure area, such as a locked room, to block the device from people who do not have permission to use it
- Connect it to a conditioned power supply to prevent damage from sudden power changes


Other environmental requirements:

- Operating temperature: 0° to 40°C (32° to 104°F)
- Operating humidity: 5% to 90% non-condensing
- Non-operating temperature: -40° to 70°C (-40° to 158°F)
- Non-operating humidity: 5% to 90%, non-condensing

## Hardware Description

### Front View

Front view of the Firebox M290, M390, M590, and M690:

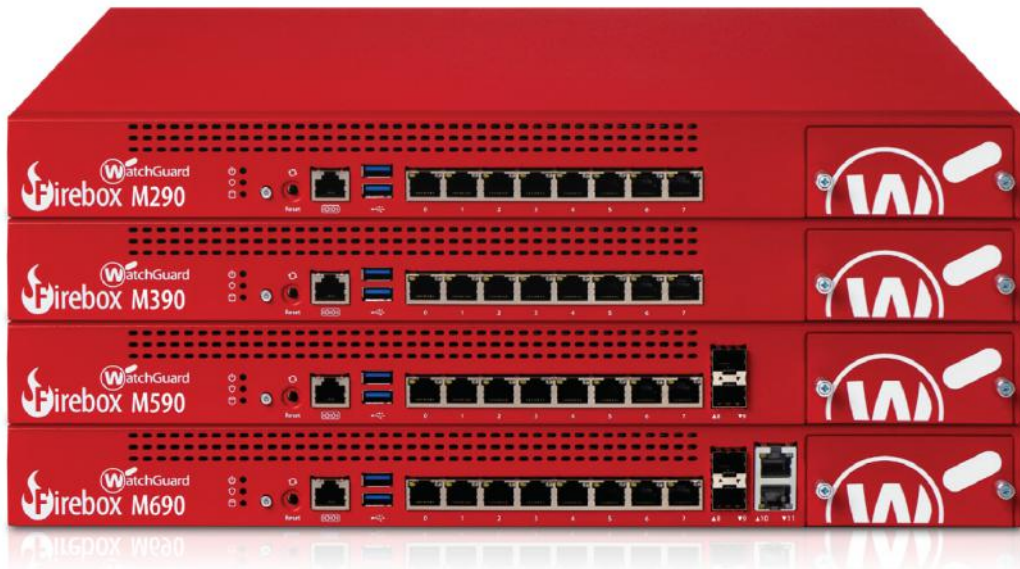

View of the indicators and ports on the front left panel of the Firebox M690:



## Buttons and Indicators

### Power (⏻)

The power indicator is green when the device is powered on.

### Arm/Disarm (🛡️)

When the device is armed and ready to pass traffic, this indicator is green. When the device is powered on, but not ready to pass traffic, this indicator is red.

### Storage (💾)

When there is activity on the mSATA card or hard disk, this indicator is yellow.

### Power Button (⏻)

The Power button is lit to indicate power status. It is green when the Firebox is powered on, and red when power is available, but the Firebox is powered off.

When the Power button is red, press it to power on the Firebox.

When the Power button is green, press and hold it for five seconds to power off the Firebox. The Firebox does not power off if you briefly press the Power button.

### Reset Button

The Reset button, located to the right of the Power button, resets the device to factory-default settings. To reset the device, see [Restore Factory Default Settings](#)

## Built-in Interfaces

The Firebox M290/390/590/690 models have eight built-in network interfaces, two USB interfaces, and one serial console port. The Firebox M590 and M690 have additional 10G interfaces.

### Dual USB interfaces

Connect a USB storage device to use for USB backup and restore, or to store a support snapshot. For more information about USB functions, see [Fireware Help](#).

### Console port

An RJ45 connector for the serial (console) interface is the bottom interface located to the left of the USB interfaces. You can connect to this serial interface to log in to the Fireware command line interface.

For more information about the command line interface, see the current *Fireware Command Line Interface Reference*.

### 1GB RJ45 Ethernet interfaces

Interfaces 0-7 are RJ45 Ethernet interfaces that support link speeds of 10, 100, or 1000 Mbps. Each RJ45 interface has two indicators. The right indicator shows the interface connection status. The left indicator shows interface activity.

Indicator	Indicator Color	Interface Status
Connection (right)	Yellow	Link at 1000 Mbps
	Green	Link at 100 Mbps
	Not Lit	Link at 10 Mbps or no link
Activity (left)	Yellow, blinks	Power on, network activity
	Not Lit	Power off, no connections

### 10Gb SFP+ interfaces (M590 and M690)

The Firebox M590 and M690 interfaces 8 and 9 are SFP+ interfaces that support link speeds of 10000 Mbps. These SFP+ ports only support 10000 Mbps full duplex operations, and cannot be set to auto negotiate.

Each SFP+ interface has one indicator for activity.

Indicator	Indicator Color	Interface Status
Activity	Orange, blinks	Power on, network activity
	Not Lit	Power off, no connections

### 10Gb RJ45 Ethernet interfaces

Interfaces 10 and 11 are RJ45 Ethernet interfaces that support link speeds of 1000, 2500, or 10000 Mbps. Each RJ45 interface has two indicators. The right indicator shows the interface connection status. The left indicator shows interface activity.

Indicator	Indicator Color	Interface Status
Connection (right)	Yellow	Link at 10 Gbps
	Green	Link at 2.5 Gbps
	Not Lit	Link at 1 Gbps, 100 Mbps, or no link

Indicator	Indicator Color	Interface Status
Activity (left)	Yellow, blinks	Power on, network activity
	Not Lit	Power off, no connections

## Interface Modules

To add more interfaces to your Firebox, you can install an interface module in the interface module slot. You must install the interface module before you can configure the interfaces. For instructions to install or remove interface modules, see [Interface Module Installation](#).

Interface modules are not hot-swappable. To avoid damage to the system, power off the Firebox before you install or remove interface modules.

You can purchase compatible interface modules from an authorized WatchGuard reseller:

- WatchGuard Firebox M 4 x 1Gb Copper Module (WG9018)
- WatchGuard Firebox M 4 x 1Gb SFP Fiber Module (WG9019)
- WatchGuard Firebox M 2 x10 Gb SFP+ Fiber Module (WG9020)
- WatchGuard Firebox M 4 x Multispeed (1/2.5/5G) Copper Module with PoE (WG9021)

For each interface module, ports are numbered from 0-3 or 0-1. The interface numbers that appear in the Firebox configuration depend on the number of ports on the interface module. In the management software, the interfaces numbers start after the number of interfaces built into the base model.

Number of Ports	Modular Interface Port Numbers	Interface Numbers in Management Software (M290 and M390)	Interface Numbers in Management Software (M590)	Interface Numbers in Management Software (M690)
4	0-3	8-11	10-13	12-15
2	0-1	8-9	10-11	12-13

Indicators for the modular interfaces are described in the subsequent sections.

[4 Port 1G RJ45 Interface Module](#)

[4 Port 1G SFP Interface Module](#)

[2 Port 10G SFP+ Interface Module](#)

[4 Port Multispeed RJ45 Interface Module with PoE](#)

## Rear View

Rear view of the Firebox M690:



### *Cooling fans*

The fans decrease the internal temperature of the device. The fans start at maximum RPM when the Firebox is powered on. The device adjusts the fan speed based on the external temperature and device CPU load.

### *AC receptacles*

Each AC receptacle on the Firebox accepts a detachable AC power cord supplied with the Firebox. M290 and M390 devices have a standard auto-sensing AC power supply.

M590 and M690 devices have dual auto-sensing AC power supplies. An audible alarm indicates if power is unavailable or if a power supply does not function correctly.

We recommend you connect both power supplies on the M590 and M690 to power for redundancy. If only one power supply is connected, an audible alarm will indicate that power is unavailable on the disconnected power supply. You can temporarily disable this alarm until the next reboot from the Fireware Command Line Interface (CLI) with the command `diagnose hardware dualpoweralarm off`. For more information, see the [Fireware Command Line Interface Reference](#).

### *PoE power receptacle (for module use)*

M590 and M690 devices have a receptacle that accepts 54V DC power for use with the [4-Port Multispeed RJ45 Interface Module with PoE](#).

You can use the optional 54V power supply to provide PoE power to the module ports: WG8034 (US), WG8035 (EU), WG8036 (UK), WG8037 (AU)

### *Power switch*

Controls the power supplied to the Firebox.

## Rack Mount Installation

You can use either the included front ear brackets or the rack rail kit to install your Firebox in a network rack.

Your Firebox ships with two front ear brackets.

The included front ear bracket kit includes:

- 2 long front ear brackets
- 8 small screws

A rack rail kit is available separately. The WatchGuard part number for the rail kit is WG8596.

The rack rail kit includes:

- 2 sliding rails
- 6 small screws and 8 large screws

- Front ear bracket kit
- 2 short front ear brackets
- 4 small screws
- 2 large screws

## Precautions

When you install the device in a rack, make sure you consider these factors:

### *Elevated Operating Ambient Temperature*

If you install the device in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Make sure the ambient temperature of the rack environment is within the certified operating range specified in this Hardware Guide.

### *Reduced Air Flow*

When you install the device in a rack, make sure that the amount of air flow required for safe operation of the equipment is not compromised.

### *Mechanical Loading*

When you mount the device in the rack, avoid hazardous conditions caused by uneven mechanical loading.

### *Circuit Overloading*

Make sure you connect the device to the power supply circuit in such a way that there is no overloading of the circuits, and no impact on overcurrent protection and supply wiring.

### *Reliable Grounding*

Make sure all rack-mounted equipment is correctly grounded. For example, make sure you use power strips instead of direct connections to the branch circuit.

Do not use your slide/rail mounted device as a shelf or work space.

## Rack Installation with Included Front Ear Brackets

You can use the front ear bracket kit to install your Firebox in a network rack. The included front ear brackets attach to the side of the Firebox and can support it without the optional rack kit. You cannot use the included front ear brackets and the rail kit together.

Use these steps to attach the front ear brackets and install the Firebox in a network rack. It could require two people to safely complete these steps.

1. Locate the front ear brackets and screws.
2. Locate six rack screws (not included).
3. Use four of the screws provided with the front ear brackets to attach a bracket to the front of the Firebox on one side.
4. Use the other four screws to attach the other front ear bracket to the other side of the Firebox.
5. Position the Firebox in the network rack so that the holes in the brackets align with the holes in the front of the rack.
6. Use three rack screws to securely attach the brackets to the rack.

## Rack Installation with Rack Rail Kit

You can use the optional rack rail kit to install your Firebox in a network rack.

To use the rack rail kit, do not attach the included front ear brackets.

Separate the inner rails from the outer rails.

Attach the inner rails and front ear brackets to the Firebox.

Attach the outer rails to the rack.

Install the Firebox in the rack.

Remove the Firebox from the rack

## Interface Module Installation

You can install an interface module in the interface module slot of your Firebox. The supported interface modules are described in detail in the [Interface Modules](#) section.

Interface modules are not hot-swappable. To avoid damage to the system, power off the Firebox before you install or remove interface modules.

### Install an Interface Module

To install an interface module:

1. Disconnect the power cable from the Firebox.
2. Loosen the two captive screws on the slot cover.
3. Remove the slot cover to expose the interface slot.
4. Insert the interface module into the slot, and push it firmly into place.
5. Tighten the two captive screws on the interface module to attach the interface to the Firebox.
6. Reconnect the power cables to the Firebox.

*The Firebox starts automatically. When the Firebox starts, Fireware automatically detects all installed interfaces.*

### Remove an Interface Module

Before you remove an installed interface module, make sure that the interfaces on that module are not enabled in the Firebox configuration. You cannot manage a Firebox if an enabled interface has been removed.

To remove an installed interface module:

1. Disconnect the power cable from the Firebox.
2. Disconnect all network cables from the installed interface module.
3. Loosen the two screws on the installed interface module.
4. Slide the interface module out of the slot.
5. Place the removed interface module on an antistatic surface, or immediately install it in another slot.



6. Install a slot cover over the empty slot or install another interface module. The slot cover keeps dust out of the Firebox.

## Restore Factory Default Settings

If you ever need to, you can restore your Firebox to its factory-default settings. For example, if you do not know the administrator account passphrase or you want to start over with a new configuration, you can reset your device. Make sure you back up your device configuration before you reset your device in case you want to restore it in the future.

To reset your device:

1. If necessary, use the power switch on the rear of the device to power it on.
2. Press and hold the **Power** button on the front of the device for five seconds to power it off.
3. Press and hold the **Reset** button, while you briefly press the **Power** button on the front of the device to power it on.
4. Continue to hold the **Reset** button while the **Arm** indicator is red.
5. Continue to hold the **Reset** button while the **Arm** indicator is slowly flashing green.
6. When the **Arm** indicator flashes green more rapidly, release the **Reset** button.
7. Wait until the **Arm** indicator starts flashing red.
8. Press and hold the **Power** button on the front of the device for five seconds to power off the device.
9. Briefly press the **Power** button on the front of the device to power it on.

## Notices

---

All WatchGuard products are designed and tested to meet strict safety requirements. These requirements include product safety approvals and other global compliance standards. Please read the following instructions carefully before operating the product, and refer to them as needed to ensure the continued safe operation of your product.

## Product Safety Certification

The WatchGuard product is safety certified under the following standards:

- CAN/CSA C 22.2 No. 60950-1-07+A1:2011+A2:2014
- UL 60950-1:2007 R10.14
- IEC 60950-1:2005 (Second Edition) + Am 1:2009 + Am 2:2013
- EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

## Safety Warnings

- Do not place objects on the power cord.  
Ne placez pas d'objets sur le cordon d'alimentation.
- Do not obstruct the ventilation openings. These openings prevent overheating of the machine.  
Ne pas obstruer les ouvertures de ventilation. Ces ouvertures empêchent la surchauffe de la machine.
- Never push objects of any kind into slots or openings on this equipment. Making a contact with a voltage point or shorting out a part may result in fire or electrical shock.  
N'insérez jamais d'objets de quelque nature que ce soit dans les fentes ou les ouvertures de cet équipement. Établir un contact avec un point de tension ou court-circuiter une pièce peut provoquer un incendie ou un choc électrique.

- When removing or installing an appliance, follow the general installation safety instructions. Lors du retrait ou de l'installation d'un appareil, suivez les instructions générales de sécurité d'installation.
- You must disconnect the AC power cord from the Firebox before you remove the cover of the Firebox for any reason. Vous devez débrancher le cordon d'alimentation CA du Firebox avant de retirer le couvercle du Firebox pour quelque raison que ce soit.
- There is risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the manufacturer's instructions. Il existe un risque d'explosion si la batterie est remplacée par un type incorrect. Jetez les piles usagées conformément aux instructions du fabricant.
- 警示 本電池如果更換不正確會有爆炸的危險，請勿自行更換電池
- Class I Equipment. This equipment must be earthed. The power plug must be connected to a properly wired earth ground socket outlet. An improperly wired socket outlet could place hazardous voltages on accessible metal parts. Équipement de classe I. Cet équipement doit être mis à la terre. La fiche d'alimentation doit être connectée à une prise de terre correctement câblée. Une prise de courant mal câblée peut placer des tensions dangereuses sur les pièces métalliques accessibles.
- All Ethernet cables are designed for intra-building connection to other equipment. Do not connect these ports directly to communication wiring or other wiring that exits the building where the appliance is located. Tous les câbles Ethernet sont conçus pour une connexion intra-bâtiment à d'autres équipements. Ne connectez pas ces ports directement au câblage de communication ou à tout autre câblage qui sort du bâtiment où se trouve l'appareil.
- Disconnect the power source prior to defeating or bypassing the equipment protection means (like enclosure), and to restore the equipment protection means before restoring power. Déconnectez la source d'alimentation avant de désactiver ou de contourner les moyens de protection de l'équipement (comme le boîtier), et de rétablir les moyens de protection de l'équipement avant de rétablir l'alimentation.

### 安全須知

警告：在進入機箱內部以安裝或卸下系統組件之前，必須斷開系統與所有電源的連接，並從電源模組拔下電源線。

1. 在清理本產品時請先將交流插座拔除，不能使用液態或噴霧式的清潔劑來清理，急速落下或掉下將會傷害到這個機器。
2. 如果有以下的情況發生，請將這儀器交給服務人員來檢查
  - (1) 電源線或插座損害
  - (2) 有液體滲透到本產品
  - (3) 儀器暴露在潮濕的地方
  - (4) 這個儀器不在動作或你根據使用手冊也無法使他動作時
  - (5) 儀器被摔下來且損害時

## Disclaimer

WatchGuard shall not be held liable if the end user alters, modifies, or repairs any WatchGuard hardware appliance.

## Hinweise Zur Sicherheit

Alle WatchGuard Produkte werden entwickelt und getestet, um strenge Sicherheitsanforderungen zu erfüllen. Diese Anforderungen umfassen Produktsicherheit Zulassungen und andere globale Compliance-Standards. Bitte lesen Sie die folgenden Anweisungen sorgfältig, bevor Sie das Produkt, und bezeichnen sie als notwendig, um den sicheren Betrieb des Geräts zu gewährleisten. Weitere Informationen finden Sie in der elektronischen Hardware Guide.

Die WatchGuard Produkt ist Sicherheit unter den folgenden Normen zertifiziert

- CAN/CSA C 22.2 No. 60950-1-07+A1:2011+A2:2014
- UL 60950-1:2007 R10.14
- IEC 60950-1:2005 (Second Edition) + Am 1:2009 + Am 2:2013
- EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

## Sicherheitshinweis

- Legen Sie keine Gegenstände auf das Netzkabel.
- Verdecken Sie nicht die Lüftungsöffnungen. Diese Öffnungen verhindern eine Überhitzung der Maschine.
- Stecken Sie niemals Gegenstände jeglicher Art in die Schlitze oder Öffnungen des Geräts stecken. Der Kontakt mit einem spannungsführenden Punkt oder das Kurzschließen eines Bauteils kann zu einem Brand oder elektrischen Schlag führen.
- Beim Entfernen oder Installieren eines Gerätes, nach den allgemeinen Installation Sicherheitshinweise.

## Aviso De Seguridad

Todos los productos WatchGuard están diseñados y probados para satisfacer estrictos requisitos de seguridad. Estos requisitos incluyen la homologación de productos de seguridad y otras normas de cumplimiento global. Por favor, lea atentamente las siguientes instrucciones antes de utilizar el producto, y se refieren a ellos como sea necesario para garantizar el funcionamiento seguro y continuo de su producto. Información adicional se puede encontrar en la Guía del usuario electrónica.

## Certificación de seguridad del producto

El producto tiene certificación de seguridad WatchGuard bajo las siguientes normas:

- CAN/CSA C 22.2 No. 60950-1-07+A1:2011+A2:2014
- UL 60950-1:2007 R10.14
- IEC 60950-1:2005 (Second Edition) + Am 1:2009 + Am 2:2013
- EN 60950-1:2006+A11:2009+A1:2010+A12:2011+A2:2013

## Advertencia de seguridad

- No coloque objetos sobre el cable de alimentación.
- No obstruya las aberturas de ventilación. Estas aberturas evitan el sobrecalentamiento de la máquina.
- Nunca introduzca objetos de ningún tipo en las ranuras o aberturas del equipo. El contacto con puntos de voltaje o el cortocircuito de una pieza podría provocar un incendio o una descarga eléctrica.
- Al extraer o instalar un electrodoméstico, siga las instrucciones generales de instalación de seguridad.

## FCC Certification




### Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.)

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

### CE Notice

The  symbol on your WatchGuard Technologies equipment indicates that it is in compliance with the Electromagnetic Compatibility (EMC) directive and the Low Voltage Directive (LVD) of the European Union (EU).

### RoHS Statement

The member states of the European Union approved directive 2002/95/EC, Restrictions of Hazardous Substances ("RoHS directive") that became valid on July 1, 2006. It states that all new electrical and electronic equipment put on the market within the member states must not contain certain hazardous materials. This device complies with the European Union's RoHS directive 2002/95/EC and similar regulations that may be adopted by other countries for European Sales.

### WEEE Statement

WEEE is a general set of requirements dictated in the EU Directive 2002/96/EC. This Directive mandated that member EU countries enact regulations governing the Waste of Electrical and Electronic Equipment (WEEE). The Directive, and its individual transpositions into specific country laws and legislation, is aimed at the reduction of WEEE through reuse, recovery, and recycling of WEEE.

WatchGuard is working in partnership with our European Union (EU) distribution partners to ensure that our products are in compliance with the WEEE statutes, and that the recovery of our product per the specific EU country legislative requirements is seamless for our product's end users. If you have a WatchGuard product that is at its end of life and needs to be disposed of, please contact WatchGuard Customer Care Department at:

U.S. Customers: 877.232.3531 International Customers: +1.206.613.0456

WatchGuard is reasonably confident that our products do not contain any substances or hazardous materials presently banned by any legislation, and do not present a risk due to hazardous materials. WEEE recovery professionals should also note that these products do not have any materials that are of particular high value in their individual form.

## REACH

The new EU chemicals policy REACH (Registration, Evaluation, Authorization and restriction of Chemicals) came into effect on June 1, 2007. REACH is Europe's new chemicals legislation, which is applicable in all 27 EU Member States as well as the EFTA European Economic Area (EEA). REACH creates a new system for gathering information, assessing risks to human health and the environment, and authorizing or restricting the marketing and use of chemicals produced or supplied in the EEA. REACH has an impact on EEA producers and importers of finished products and users of chemicals in the course of industrial or professional activities.

WatchGuard supports the overall REACH objective of improving the protection of human health and the environment and will meet all applicable REACH requirements. WatchGuard is strongly committed to working with our customers and supply chain to define and implement the REACH requirements and ensure a smooth transition to compliance.

One of the REACH requirements is that manufacturers and importers have the duty to register substances they are producing or importing. In accordance with the regulations, the products of WatchGuard do not need to be registered for the following reasons:

- WatchGuard does not import more than 1 metric ton per year of a substance as defined by REACH.
- WatchGuard products are non-chemical products that are not designed to release any substance under normal and reasonably predictable application.
- Our products do not contain the listed substances at more than 0.1% by weight of the whole product/part.

## Industry Canada Statement

This device complies with RSS-247 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAN ICES-3(B)/NMB-3(B) Ce dispositif est conforme à la norme CNR-247 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

## Japan VCCI Notice (Class A)

これはVCCI評議会の基準に基づくクラスA製品です。本製品がラジオやテレビ受信機の近くで使用されている場合は、電波障害を引き起こすことがあります。インストールして、取扱説明書に従って機器を使用しています。

This is a Class A product based on the standard of the VCCI Council. If this product is used near a radio or television receiver, it may cause radio interference. Install and use the equipment according to the instruction manual.

## Taiwan Class A Notice

警告使用者: 這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Warning users: This is a Class A product may cause radio interference, living environment; in this case, the user will be required to take appropriate countermeasures.

# Taiwan RoHS

設備名稱：次世代防火牆，型號（型式）：CL2AE8						
單元 Unit	限用物質及其化學符號					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr <sup>6+</sup> )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電路板總成	○	○	○	○	○	○
電源供應器	○	○	○	○	○	○
金屬機構件	○	○	○	○	○	○
塑膠機構件	○	○	○	○	○	○
配件 (cable.等)	○	○	○	○	○	○
<p>備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。</p> <p>備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。</p> <p>備考3. “-” 係指該項限用物質為排除項目。</p>						

設備名稱：次世代防火牆，型號（型式）：CL3AE8						
單元 Unit	限用物質及其化學符號					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr <sup>6+</sup> )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電路板總成	○	○	○	○	○	○
電源供應器	○	○	○	○	○	○
金屬機構件	○	○	○	○	○	○
塑膠機構件	○	○	○	○	○	○
配件 (cable.等)	○	○	○	○	○	○
備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準						

值。

備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。

備考3. “-” 係指該項限用物質為排除項目。

設備名稱：次世代防火牆，型號（型式）：CL6AE12						
單元Unit	限用物質及其化學符號					
	鉛Lead (Pb)	汞Mercury (Hg)	鎘Cadmium (Cd)	六價鉻 Hexavalent chromium (Cr <sup>+6</sup> )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
電路板總成	○	○	○	○	○	○
電源供應器	○	○	○	○	○	○
金屬機構件	○	○	○	○	○	○
塑膠機構件	○	○	○	○	○	○
配件 (cable.等)	○	○	○	○	○	○
備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值。						
備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。						
備考3. “-” 係指該項限用物質為排除項目。						

## Mexico Notice

La operación de este equipo está sujeta a las siguientes dos condiciones:

- (i) es posible que este equipo o dispositivo no cause interferencia perjudicial y
- (ii) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

## Limited Hardware Warranty



This Limited Hardware Warranty (the "Warranty") applies to the enclosed hardware product, not including any associated software, which is licensed pursuant to a separate end-user license agreement and warranty (the "Product"). BY USING THE PRODUCT, YOU (either an individual or a single entity) AGREE TO THE TERMS HEREOF.

If you do not agree to these terms, please return this package, along with proof of purchase, to the authorized dealer from which you purchased it for a full refund. WatchGuard Technologies, Inc. ("WatchGuard") and you agree as set forth below or on the reverse side of this card, as applicable.

1. **LIMITED WARRANTY.** WatchGuard warrants that upon delivery and for one (1) year thereafter (the "Warranty Period"): (a) the Product will be free from material defects in materials and workmanship, and (b) the Product, when properly installed and used for its intended purpose and in its intended operating environment, will perform substantially in accordance with WatchGuard applicable specifications.

This warranty does not apply to any Product that has been: (i) altered, repaired or modified by any party other than WatchGuard except for the replacement or inclusion of specified components authorized in, and performed in strict accordance with, documentation provided by WatchGuard; or (ii) damaged or destroyed by force majeure events, accidents, power spikes or similar events or by any intentional, reckless or negligent acts or omissions of any party. You may have additional warranties with respect to the Product from the manufacturers of Product components. However, you agree not to look to WatchGuard for, and hereby release WatchGuard from any liability for, performance of, enforcement of, or damages or other relief on account of, any such warranties or any breach thereof.

2. **REMEDIES.** If any Product does not comply with the WatchGuard warranties set forth in Section 1 above, WatchGuard will, following the receipt of the product you claim is defective and at its option, either (a) repair the Product, or (b) replace the Product with a like or similar product; provided, that you will be responsible for returning the Product and for all costs of shipping and handling. Repair or replacement of the Product shall not extend the Warranty Period. Any Product, component, part or other item replaced by WatchGuard becomes the property of WatchGuard. WatchGuard shall not be responsible for return of or damage to any software, firmware, information or data contained in, stored on, or integrated with any returned Products.
3. **DISCLAIMER AND RELEASE.** THE WARRANTIES, OBLIGATIONS AND LIABILITIES OF WATCHGUARD, AND YOUR REMEDIES, SET FORTH IN PARAGRAPHS 1 AND 2 ABOVE ARE EXCLUSIVE AND IN SUBSTITUTION FOR, AND YOU HEREBY WAIVE, DISCLAIM AND RELEASE ANY AND ALL OTHER WARRANTIES, OBLIGATIONS AND LIABILITIES OF WATCHGUARD AND ALL OTHER RIGHTS, CLAIMS AND REMEDIES YOU MAY HAVE AGAINST WATCHGUARD, EXPRESS OR IMPLIED, ARISING BY LAW OR OTHERWISE, WITH RESPECT TO ANY NONCONFORMANCE OR DEFECT IN THE PRODUCT (INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ANY IMPLIED WARRANTY ARISING FROM COURSE OF PERFORMANCE, COURSE OF DEALING, OR USAGE OF TRADE, ANY WARRANTY OF NONINFRINGEMENT, ANY WARRANTY OF UNINTERRUPTED OR ERROR-FREE OPERATION, ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY IN TORT, WHETHER OR NOT ARISING FROM THE NEGLIGENCE (WHETHER ACTIVE, PASSIVE OR IMPUTED) OR FAULT OF WATCHGUARD OR FROM PRODUCT LIABILITY, STRICT LIABILITY OR OTHER THEORY, AND ANY OBLIGATION, LIABILITY, RIGHT, CLAIM OR REMEDY FOR LOSS OR DAMAGE TO, OR CAUSED BY OR CONTRIBUTED TO BY, THE PRODUCT).
4. **LIMITATION AND LIABILITY.** WATCHGUARD'S LIABILITY (WHETHER ARISING IN CONTRACT (INCLUDING WARRANTY), TORT (INCLUDING ACTIVE, PASSIVE OR IMPUTED NEGLIGENCE AND STRICT LIABILITY AND FAULT) OR OTHER THEORY) WITH REGARD TO ANY PRODUCT WILL IN NO EVENT EXCEED THE PURCHASE PRICE PAID BY YOU FOR SUCH PRODUCT. THIS SHALL BE TRUE EVEN IN THE EVENT OF THE FAILURE OF ANY AGREED REMEDY. IN NO EVENT WILL WATCHGUARD BE LIABLE TO YOU OR ANY THIRD PARTY (WHETHER ARISING IN CONTRACT (INCLUDING WARRANTY), TORT (INCLUDING ACTIVE, PASSIVE OR IMPUTED NEGLIGENCE AND STRICT LIABILITY AND FAULT) OR OTHER THEORY) FOR COST OF COVER OR FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING WITHOUT LIMITATION LOSS

OF PROFITS, BUSINESS, OR DATA) ARISING OUT OF OR IN CONNECTION WITH THIS WARRANTY OR THE USE OF OR INABILITY TO USE THE PRODUCT, EVEN IF WATCHGUARD HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THIS SHALL BE TRUE EVEN IN THE EVENT OF THE FAILURE OF ANY AGREED REMEDY.

5. **MISCELLANEOUS PROVISIONS.** This Warranty will be governed by the laws of the state of Washington, U.S.A., without reference to its choice of law rules. The provisions of the 1980 United Nations Convention on Contracts for the International Sales of Goods, as amended, shall not apply. You agree not to directly or indirectly transfer the Product or use of the product or associated documentation to any country to which such transfer would be prohibited by the U.S. Export laws and regulations. If any provision of this Warranty is found to be invalid or unenforceable, then the remainder shall have full force and effect and the invalid provision shall be modified or partially enforced to the maximum extent permitted by law to effectuate the purpose of this Warranty. This is the entire agreement between WatchGuard and you relating to the Product, and supersedes any prior purchase order, communications, advertising or representations concerning the Product AND BY USING THE PRODUCT YOU AGREE TO THESE TERMS. IF THE PRODUCT IS BEING USED BY AN ENTITY, THE INDIVIDUAL INDICATING AGREEMENT TO THESE TERMS BY USING THE PRODUCT REPRESENTS AND WARRANTS THAT (A) SUCH INDIVIDUAL IS DULY AUTHORIZED TO ACCEPT THE WARRANTY ON BEHALF OF THE ENTITY AND TO BIND THE ENTITY TO THE TERMS OF THIS WARRANTY; (B) THE ENTITY HAS THE FULL POWER, CORPORATE OR OTHERWISE, TO ENTER INTO THE WARRANTY AND PERFORM ITS OBLIGATIONS UNDER THE WARRANTY AND; (C) THE WARRANTY AND THE PERFORMANCE OF THE ENTITY'S OBLIGATIONS UNDER THE WARRANTY DO NOT VIOLATE ANY THIRD-PARTY AGREEMENT TO WHICH THE ENTITY IS A PARTY.

No change or modification of the Warranty will be valid unless it is in writing and is signed by WatchGuard.

# Declaration of Conformity

## DECLARATION OF CONFORMITY

WatchGuard Technologies, Inc.  
505 Fifth Ave. S., Suite 500  
Seattle, WA 98104-3892 USA

WatchGuard Technologies Inc. hereby declares that the product(s) listed below conform to the European Union directives and standards identified in this declaration.

### Product(s):

WatchGuard Product Name : Firebox M290  
Hardware Model : CL2AE8

### EU Directive(s):

Low Voltage (2014/35/EC)  
Electromagnetic Compatibility (2014/30/EU)  
RoHS EU 2015/863(RoHS2)  
WEEE Directive 2012/19/EU  
REACH EC 1907/2006,  
SVHC 201

### Standard(s):

**Safety:** EN 62368-1:2014 + A11:2017

**Emission:** EN 55032: 2015 + AC: 2016

FCC Part 15B  
ICES-003: Issue 7  
CISPR 32/AC:2016  
VCCI-CISPR 32:2016  
AS/NZS CISPR 32:2015

**Immunity:**

EN 61000-3-2:2014  
EN 61000-3-3:2013  
EN 55035: 2017/A11 2020  
IEC 61000-4-2:2008  
IEC 61000-4-3:2006+A1:2007+A2:2010  
IEC 61000-4-4:2012  
IEC 61000-4-5:2014  
IEC 61000-4-6:2013  
IEC 61000-4-8:2009  
IEC 61000-4-11:2004

Signature:

*Laurence Huang*



Full Name: Laurence Huang  
Position: Manufacturing Program Manager  
Date: 12 April 2021

## DECLARATION OF CONFORMITY

**WatchGuard Technologies, Inc.  
505 Fifth Ave. S., Suite 500  
Seattle, WA 98104-3892 USA**

**WatchGuard Technologies Inc. hereby declares that the product(s) listed below conform to the European Union directives and standards identified in this declaration.**

**Product(s):**

WatchGuard Product Name : Firebox M390  
Hardware Model : CL3AE8

**EU Directive(s):**

Low Voltage (2014/35/EC)  
Electromagnetic Compatibility (2014/30/EU)  
RoHS EU 2015/863(RoHS2)  
WEEE Directive 2012/19/EU  
REACH EC 1907/2006,  
SVHC 201

**Standard(s):**

**Safety:** EN 62368-1:2014 + A11:2017  
**Emission:** EN 55032: 2015 + AC: 2016  
FCC Part 15B  
ICES-003: Issue 7  
CISPR 32/AC:2016  
VCCI-CISPR 32:2016  
AS/NZS CISPR 32:2015

**Immunity:** EN 61000-3-2:2014  
EN 61000-3-3:2013  
EN 55035: 2017/A11 2020  
IEC 61000-4-2:2008  
IEC 61000-4-3:2006+A1:2007+A2:2010  
IEC 61000-4-4:2012  
IEC 61000-4-5:2014  
IEC 61000-4-6:2013  
IEC 61000-4-8:2009  
IEC 61000-4-11:2004

*Laurence Huang*



Signature:

Full Name: Laurence Huang  
Position: Manufacturing Program Manager  
Date: 12 April 2021

## DECLARATION OF CONFORMITY

**WatchGuard Technologies, Inc.**  
**505 Fifth Ave. S., Suite 500**  
**Seattle, WA 98104-3892 USA**

**WatchGuard Technologies Inc. hereby declares that the product(s) listed below conform to the European Union directives and standards identified in this declaration.**

**Product(s):**

WatchGuard Product Name : Firebox M590/M690  
 Hardware Model : CL6AE12

**EU Directive(s):**

Low Voltage (2014/35/EC)  
 Electromagnetic Compatibility (2014/30/EU)  
 RoHS EU 2015/863(RoHS2)  
 WEEE Directive 2012/19/EU  
 REACH EC 1907/2006,  
 SVHC 201

**Standard(s):**

**Safety:** EN 62368-1:2014 + A11:2017  
**Emission:** EN 55032: 2015 + AC: 2016  
 FCC Part 15B  
 ICES-003: Issue 7  
 CISPR 32/AC:2016  
 VCCI-CISPR 32:2016  
 AS/NZS CISPR 32:2015

**Immunity:** EN 61000-3-2:2014  
 EN 61000-3-3:2013  
 EN 55035: 2017/A11 2020  
 IEC 61000-4-2:2008  
 IEC 61000-4-3:2006+A1:2007+A2:2010  
 IEC 61000-4-4:2012  
 IEC 61000-4-5:2014  
 IEC 61000-4-6:2013  
 IEC 61000-4-8:2009  
 IEC 61000-4-11:2004

Signature:

*Laurence Huang*



Full Name: Laurence Huang  
 Position: Manufacturing Program Manager  
 Date: 12 April 2021

[Give Us Feedback](#) • [Get Support](#) • [All Product Documentation](#) • [Technical Search](#)

© 2021 WatchGuard Technologies, Inc. All rights reserved. WatchGuard and the WatchGuard logo are registered trademarks or trademarks of WatchGuard Technologies in the United States and/or other countries. All other tradenames are the property of their respective owners.